

PRODUCT SHEET R-COLLECTION - TRACKTRIM

FOR THE 501 TRIETEX RAIL WITH MOTOR END AND RETURN END

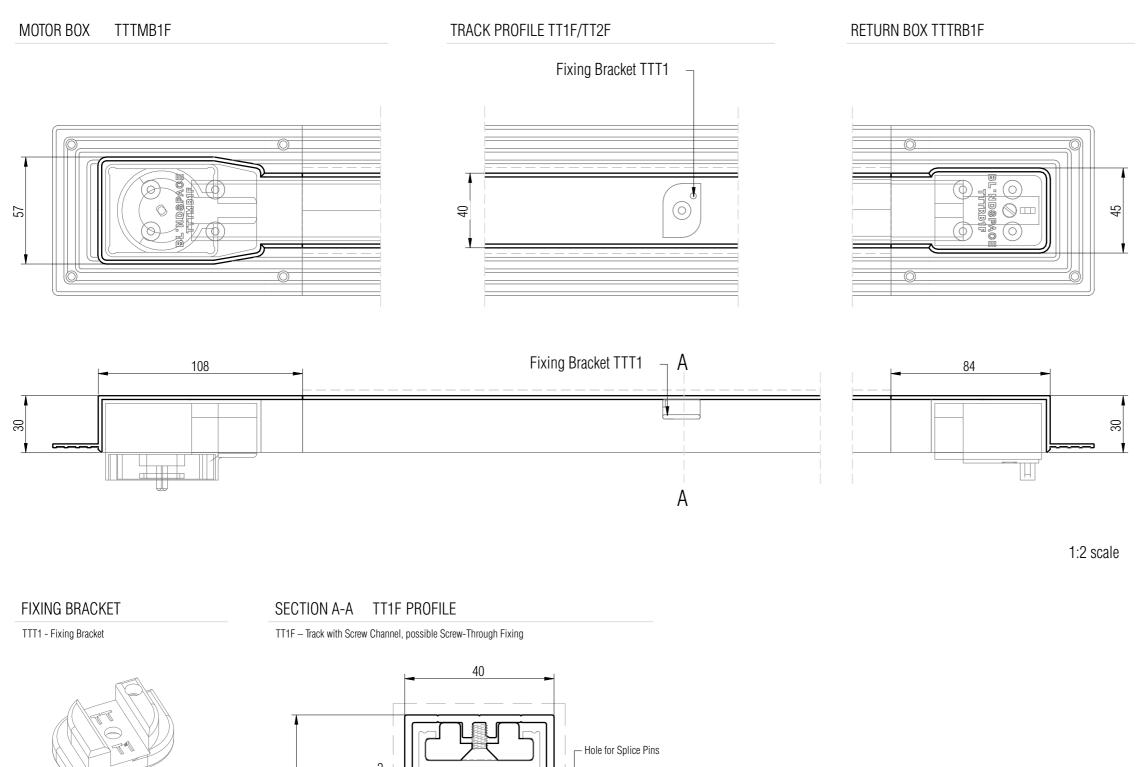

Fixing Bracket for drapery track can be used with both types TT1F & TT2F of TrackTrim profiles.

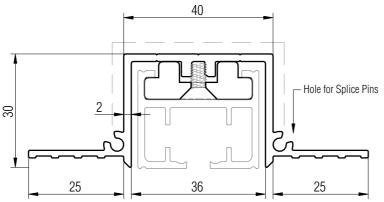



1:1 full scale

ProductBlindspace TrackTrimDescriptionRecessed profiles to house curtain tracks.Curtain sizePlease see size chart and supplier details for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks cong Splice Pins for joiningInstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comInstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comPrint date2023/01/19Page sizeISO A3 420x297		
to house curtain tracks.Curtain sizePlease see size chart and supplier details for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length2000mm Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19	Product	Blindspace TrackTrim
sizedetails for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length2000mm Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19	Description	
and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length2000mm Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19		details for curtain such as max.
Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length2000mm Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19	Finishes	and decorated at site
accessoriesLong Splice Pins for joiningTrack length2000mm Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19	Material	
lengthCut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19	•	
Drawings available both in PDF and DWG atDF blindspace.comTracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracksPrint date2023/01/19		Cut to size for shorter lengths.
	Installation	Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation,
Page size ISO A3 420x297	Print date	2023/01/19
	Page size	ISO A3 420x297
Print file blindspace tracktrim with trietex.dwg	Print file	blindspace tracktrim with trietex.dwg


PRODUCT SHEET R-COLLECTION - TRACKTRIM

FOR THE 502 SOMFY RAIL WITH INVERTED MOTOR AND RETURN END

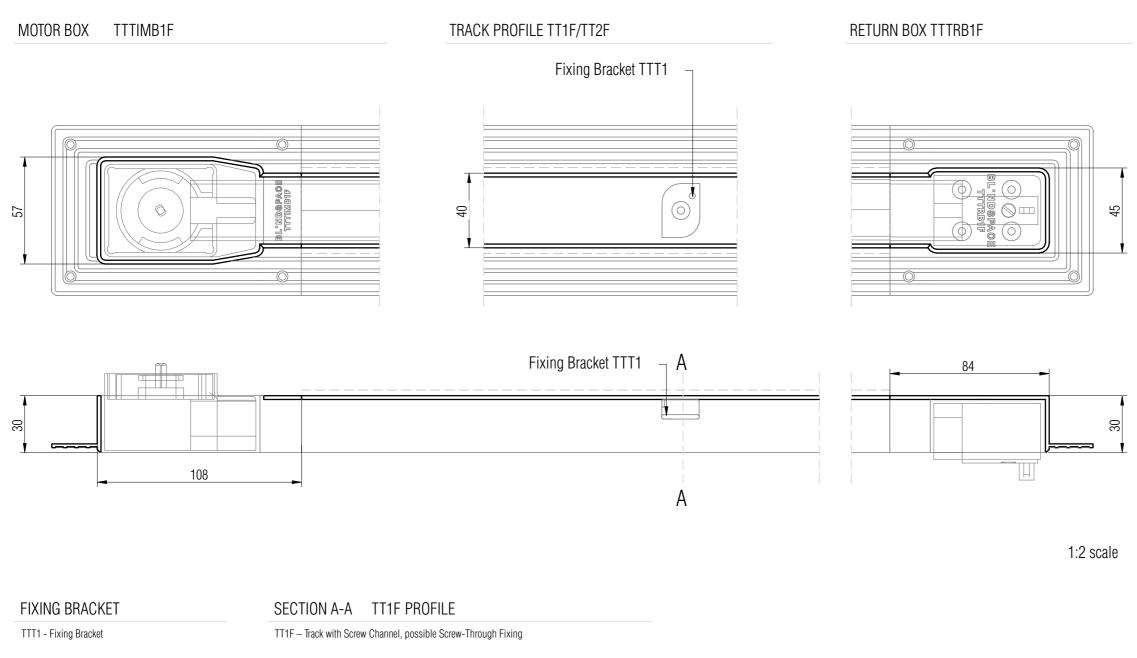

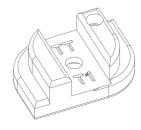

Fixing Bracket for drapery track can be used with both types TT1F & TT2F of TrackTrim profiles.

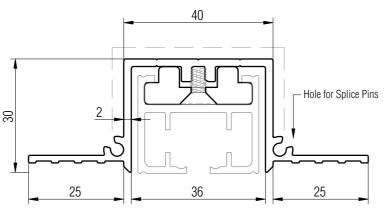

1:1 full scale

Product	Blindspace TrackTrim
Description	Recessed profiles to house curtain tracks.
Curtain size	Please see size chart and supplier details for curtain such as max. length and weight.
Finishes	White to be plastered in and decorated at site to match ceiling.
Material	Track EN 6063 T6, End set PLA Thermoplastic Polyester
Optional accessories	Curve Sections for bent tracks Long Splice Pins for joining
Track length	2000mm Cut to size for shorter lengths. Spliced together for longer lengths.
Installation	Please refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 200mm through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 3mm recess space for ease of installation, shown in dash line around tracks
Print date	2023/01/19
Page size	ISO A3 420x297
Print file	blindspace tracktrim with trietex im.dwg